

Wash Down Pump Panel 2-way 12V/24V

- Remotely operate your wash down pump from Albinus' two-position switch wash down pump control panel
- Switch positions manual ON and OFF
- Integrated operating light and fuse holder. Fuses are **not** included. Select the fuse according to the recommended fuse size of the connected pump; refer to the pump manual



Caution! Keep all wired connections above the highest water level. Wires must be joined with butt connectors and a marine grade sealant to prevent wire corrosion.



Caution! Always install proper fuse size to prevent damage to product should a short occur. Failure to install proper fuse could increase risk of pump malfunction, potentially resulting in personal injury and/or fire hazard.

Electrical Installation:

See the wiring diagrams in figure 1. **Important:** all electrical wiring must be clamped with the connections well above the bilge water level.

Do not remove the insulation more than necessary. All wiring connections should be sealed with a marine sealant to avoid oxidation

2-way Bilge Pump Panel (ON – OFF)
Albinus PN 02-69-032 - 12V/24V

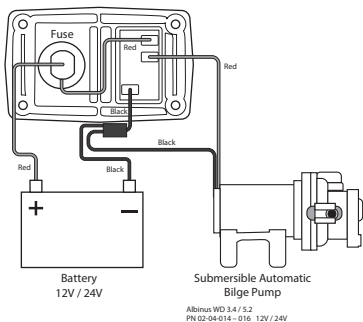


Figure 1 Wiring for 2-way Wash Down Pump Panel

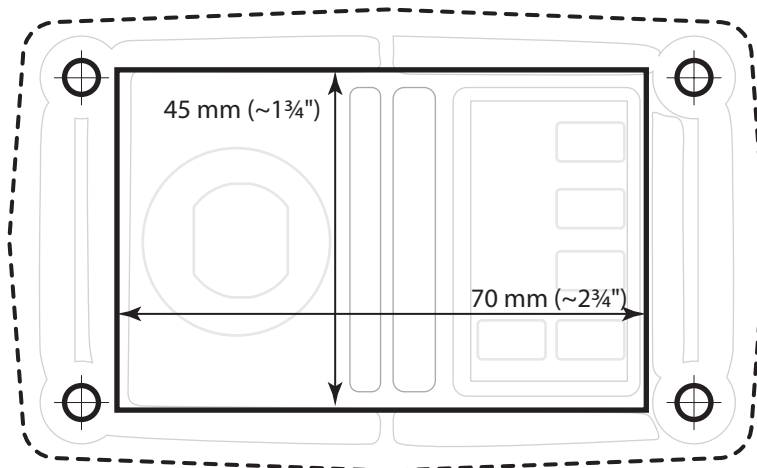


Figure 4 Template for mounting the
Wash Down Pump Panel (scale 1:1)
Dimensions 100 x 61 mm (3.9 x 2.4 inches)

Cut out a rectangular hole 70 mm x 45 mm (W x H) in the mounting surface to accommodate the electronics.
Drill 4 appropriate sized holes for your preferred fasteners to secure the switch panel to its mounting surface.



EN 55014-1
ISO 8846
ISO 8849
ISO 10133

Waste handling & material recycling

At the product's end of life, please dispose of the product according to applicable law. Where applicable, please disassemble the product and recycle the parts according to material.

Albin Group
since 1928

Albin Group AB
Kämpevägen 17
55302 Jönköping, Sweden

info@albin.group
www.albin.group