

RV instructions for Silent Electric toilets and Design Silent Electric toilets with Control Panel Rocker Switch (07-66-025) and RV instructions for Silent Premium toilets with Digital Control Panel (07-66-024).

- Silent operation and low water consumption
- · Seperated flushing and waste disposal cycle
- Rocker switch control panel (Silent Electric and Design) with 1 single function button and 1 dual function button or Electronic control panel with 3 separate buttons (Premium)
- High performance discharge pump

- Complete toilet & conversion kit are interchangeable with Jabsco, Johnson and TMC
- Spray nozzle elbow for efficient flushing
- All corrosion resistant material
- Rinse/flush with separate flush pump or existing pressurized system via solenoid valve – neither of which are included

General RV Installation

Install your Albinus toilet on a flat surface. You may employ the use of a separate flush pump or an existing pressurized system (2.5 – 3.5 bar) for flushing. A macerator discharge pump is incorporated into the toilet. For flushing you will need a flush pump (Albinus part no. 07-66-032 (12V), 07-66-033 (24V)), or if using a pressurized central system you will need a solenoid valve (Albinus part no. 07-66-030 (12V), 07-66-031 (24V), or Albinus part no. 07-66-035 (12V)).

Holding tank Pump-out fitting

Follow your country's recommended standard.

Pipework: general instructions

Inlet: 19 mm (¾") hose connection.

Discharge: 25 mm (1") or 38 mm (1½") hose

- Spiral reinforced smooth bore flexible hose for both the 19 mm (34") internal diameter inlet and the 25 mm (1") or 38 mm ($1\frac{1}{2}$ ") internal diameter outlet hose
- · Stainless steel hose clips for the hoses
- Secure the hose runs so that the hoses cannot move, nor exert any leverage action on the hose tail fittings to which they are connected, as this may cause adjacent joints to leak
- Avoid sharp bends in the hoses since this might cause them to become kinked
- Keep all pipework lengths as short as possible while you are carrying out these operations. Unnecessary inlet or outlet hose lengths just make the toilet harder to pump.


Pipework:

Inlet: 19 mm (¾") hose

- Run the inlet hose by the most direct route from the fresh water holding tank to the flush pump and then to the flushing pump inlet connection; or, the most direct way from the pressuized water pipe in a centralized system.
- For convenience of use, when the freshwater holding tank is situated below the flush pump, install an in-line non-return valve between the fresh water holding tank and the flush pump, which will ensure that the pump stays primed in between usages.

Discharge: 25 mm (1") or 38 mm (11/2") hose

· Run the discharge hose to the black water holdingtank.

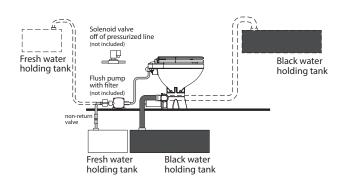

Mounting

Before starting the assembly, read the complete mounting instruction first. You need the following:

- Stainless steel bolts: 3 pcs, 8 mm ($\frac{5}{16}$ ") diameter of length to suit the thickness of the mounting surface.
- Stainless steel nuts: 3 pcs preferably self-locking. If you do not use self-locking nuts you need to add locking compound on the screws-/ nuts.
- Stainless steel washers: 3 pcs.
- Drill: Diameter 9 mm (approx. 0.35")
- Silicone sealant, white.
- If you do not use self-locking nuts, you will need some nutlocking compound.

Silent Electric

- 1. Put the toilet in the selected position.
- 2. Using the holes in the base as a guide, mark the positions for the 3 bolt holes on the mounting surface.
- 3. Remove the toilet and drill 3 vertical holes, with a diameter of 9 mm (0.35"), through the mounting surface.
- 4. Apply the white silicone sealant to the outer rim of the bottom base.
- 5. Put the toilet on its place and tighten the fastenings securely. If you are not using self-locking nuts, use nutlocking compound.
- 6. Use the sealant around the base, towards the floor.

Silent Premium & Design Silent Electric

- 1. Put the toilet in the selected position.
- 2. Using the two holes in the toilet and the outer edge of the toilet base as guide, mark the location of the holes and trace a bit of the outer edge of the base
- 3. Remove the bowl.
- 4. Re-draw a new parallel line approximately $14-15\,\mathrm{mm}$ (approx 0.6") in from the line you drew in step 2.
- 5. Put the assembly bracket on the floor, with the slot horizontal.
- 6. Mark the middle position of the slot and drill a Ø 5 mm (0.2") hole for each bracket.
- 7. Tighten the bracket by using the enclosed \emptyset 6,2 mm ($\frac{1}{4}$ ") screws. (Ensure that they are not too long for your installation)
- 8. Put the toilet back in the selected place.
- 9. Put the one plastic sleeve in each assembly hole on the toilet.
- 10. Secure the toilet by using the \emptyset 4,7 mm (%) screws. As the bracket has a lot of small holes, you can make a small final position adjustment.
- 11. Put the screw cover on the screw head.
- 12. Use the sealant around the base, towards the floor.



Correct operation of the toilet is essential for your and comfort.

Note that the Silent Electric, Design Silent Electric and Silent Premium toilets are designed to have the bowl empty when not in use.

Silent Electric toilets and Design Silent Electric toilets with Control Panel Rocker Switch (07-66-025) Control panel

The panel controls the rinse and the discharge, by two buttons.

- Button 1, One function, discharge and rinse.
- Button 2, Two functions, Rinse toilet OR discharge toilet.

First use

- 1. Use control panel as described above.
- 2. Do not put anything in the toilet unless it has not pasted through your body, except toilet paper.

albinus .

Normal Use

- 1. Before use, ensure that there is enough water in the bowl to prevent the toilet paper becoming compacted at the bottom of the bowl.
- 2. If the bowl is empty, rinse the toilet with button 2 "Rinse".
- 3. Use good quality soft RV-grade toilet paper, but do not use more than necessary.
- 4. After use, flush the toilet with button 1.
- 5. Afterwards, discharge the toilet with button 2 "Discharge" until the bowl is empty, Always leave the bowl empty to minimize odour and spillage.

Silent Premium toilets with Digital Control Panel (07-66-024). Control panel

3 function control panel; Before use – after use – short use and trimmer to regulate the flow

Short Use Button

- 1. The Short Use button is intended mainly for only liquid waste, where there is no risk of solid waste sticking to the toilet bowl
- 2. Pressing the Short Use button switch will automatically both rinse and discharge the toilet, leaving the bowl empty.

Before Use Button

 The Before Use function will fill the toilet bowl with water prior to use, wetting the sides so that solids will not soil the sides of the bowl or toilet paper becomes compacted at the bottom of the bowl. 2. Activating the Before Use button fills the bowl with water, prior to use. Important! For optimum operation, the water level should be about 5 cm (2") above the discharge hole. The amount of water can be adjusted by truning the trimming shafts at the back of the control panel. A clockwise turn on the trimmer shaft will increase the flow of water and a counter-clockwise turn will reduce the flow of water.

After Use Button:

 The After Use function discharges the contents of the bowl, leaving the bowl empty.




Cleaning

Regularly flushing with clean water is one of the most effective methods to keep the toilet clean and odor-free

- To clean the bowl, use any liquid or cream ceramic cleaner
- To clean the rest of the toilet, including the seat and lid, use a nonabrasive liquid cleaner. Polish with a dry cloth only.
- To disinfect the toilet, use a liquid disinfectant diluted in accordance with the manufacturer's instructions. It is possible to apply it to all parts of the
- toilet using a sponge or soft brush as necessary.
- After applying any cleaning or disinfecting agent, always flush well. DO NOT ALLOW THESE AGENTS TO STAND IN THE SYSTEM because strong detergents stay on the inside of the system and burn through the rubber seals of the pump, invalidating the warranty.

NOTE: Do not put any of the following into the toilet: Sanitary Towels, Wet Strength Tissues, Cotton Wool, Cigarettes, Matches, Chewing Gum or any solid objects, Petrol, Diesel, Oil, Solvents of any kind or water that is more than hand warm.

The toilet is rated to macerate toilet paper and organic waste only. Do not put anything, other than toilet paper, in the toilet unless it has passed through your body!

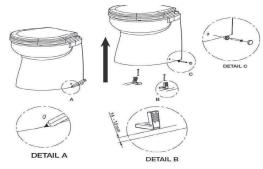

Electrical connections

The circuit for the toilet power supply must be independent and cannot be used for any other appliance. Connect the battery positive terminal to a fuse of adequate capacity load. See wiring dimensions table. For the Rocker Switch Control panel, connect the wires from the discharge and rinse pump as follows:

- to positive battery terminal (+) 1. Panel Red
- 2. Panel Brown to Flush Pump/Solenoid Valve positive (+)
- 3. Panel Yellow to Discharge Pump positive (brown)

Flush pump/Solenoid Valve negative (–) and discharge pump negative (–)(blue) to battery negative (–)

To install the switch panel, drill two 13/4" (45mm) diameter holes (slightly over-lapping) through the selected switch mounting surface. Ensure the template is oriented correctly because it is not symmetrical. Also, drill four appropriate sized holes for the fasteners selected to secure the switch panel to its mounting surface.

Connect the wires from the pump to the Digital Control panel switch as follows:

- 1. White wire to the battery positive (+) wire
- 2. Brown wire to the positive (brown) (+) wire of the discharge pump
- 3. Blue wire to the negative (blue) (-) wire of the discharge pump
- Grey wire to the battery negative (-) wire
- 5. Black wire to the negative (–) wire of the flush pump (Alternative 1) or solenoid valve in a pressurized central system (Alternative 2)
- Red wire to the positive (+) wire of the flush pump (Alternative 1) or solenoid valve in a pressurized central system (Alternative 2)

Level indicator

Albinus offers separately sold tank level indicators: Digital Tank Level Monitor Kit 12/24 V, part no. 03-69-017 – see its instruction sheet for installation, and Tank Level Indicator Kit 12V/24V part no. 03-66-012 – with probes. You will only need the level indicator cable in the event you intend to connect to a level indicator

Combination printed Combination colored wires/ probes circuit colored wires White long probe (1) = common Blue/Green long probe (2) = half tank = full tank short probe (3) Yellow Black - battery Red + battery Control panel LEDs = full tank = half tank

Red LED Yellow LED Green LED = ON

The color indications above refer to the complete kit (control panel, wires and terminals). The standard length of the wires is 3.5 m (11.5 feet)

Warning! Do NOT short-circuit the side probes with the central one.


CAUTION and SAFETY:


A correct motor polarity (red and brown wires to positive (+) and blue and black wires to negative (-)) is very important. A reverse polarity can damage the motor, thus voiding the warranty. For a correct functioning of the toilet, a full voltage to the motor is indispensable.

Do not connect any other electrical appliances to the electric line of the bowl. Do not replace the supplied connecting plugs.

		Wire size per feet and meter of run					
Voltage	Fuse size	0 m – 3 m (0'-10')	3 m – 4.6 m (10' – 15')	4.6 m – 7.6 m (15' – 25')	7.6 m – 12.2 m (25' – 40')	12.2 m – 18.3 m (40' – 60')	
12V	25 A	2.5 mm ² (#14)	2.5 mm² (#14)	4 mm² (#12)	6 mm² (#10)	10 mm² (#8)	
24V	20 A	2.5 mm ² (#14)	2.5 mm² (#14)	2.5 mm ² (#14)	2.5 mm ² (#14)	4 mm² (#12)	

Part nr	Description	Amp	Net weight	Width x Depth x Height x Height open seat
07-03-010	Silent Electric Compact 12V	17	9.2 Kg	340 x 440 x 390 x 700 mm
07-03-011	Silent Electric Compact 24V	8	20 lbs	(13.4 x 17.3 x 15.4 x 27.6 in)
07-03-012	Silent Electric Comfort 12V	17	10.8 Kg	360 x 470 x 370 x 780 mm (14.2 x 18.5 x 14.6 x 30.7 in)
07-03-013	Silent Electric Comfort 24V	8	24 lbs	
07-04-014	Premium Electric Standard 12V	30	21 kg	365 x 455 x 455 x 860 mm
07-04-015	Premium Electric Standard 24V	16	46 lbs	(14.4 x 17.9 x 17.9 x 33.9 in)
07-04-016	Premium Electric Low 12V	30	20 kg	365 x 455 x 385 x 720 mm (14.4 x 17.9 x 15.2 x 27.8 in)
07-04-017	Premium Electric Low 24V	16	44 lbs	
07-03-045	Design Silent Electric 12V	19	18 kg	340 x 400 x 410 x 720 mm
07-03-046	Design Silent Electric 24V	10	40 lbs	(13.4 x 15.7 x 16.1 x 28.3 in)

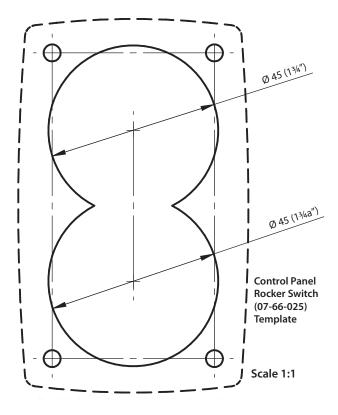

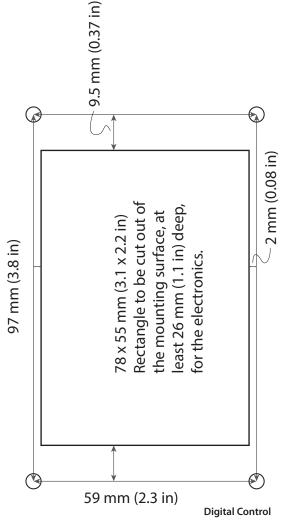





Premium Electric Standard










Scale 1:1

Panel (07-66-024) **Template**

Silent Electric Comfort

Design Silent Electric

Spare parts

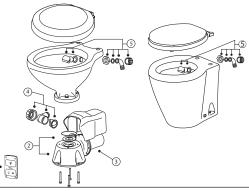

Common spares				
part#		Description		
07-99-063	2	Base Group		
07-99-040	3	Motor Group Silent El. 12V.		
07-99-041	3	Motor Group Silent El. 24V.		
07-99-064	4	Outlet Elbow		
07-99-060	5	Intake Elbow		
07-99-069	Α	Inlet Pump Group Design / Premium		
07-99-082	В	Motor Premium/Design Silent 12V		
07-99-083	В	Motor Premium/Design Silent 24V		
07-99-074	С	Outlet Elbow Electric/Design/ Premium Low		
07-99-084	С	Oulet Elbow Kit For Design Silent/ Premium		
07-99-085	9, 11	Outlet Hose Kit For Design Silent		
07-99-068	gaskets in A, C	Complete Gasket Kit Design/Premium		

Troubleshooting

1 No rinse/flush water:

- · check the fuse
- press the "before use" button to check that power is being supplied to the control panel and the flush pump (single system) or the solenoid valve (in case of centralized systems)

2 Discharge pump not working:

- check the fuse
- turn to a minimum the trimmer shaft on the control panel back side and then press the "after use" button, to check that power is being supplied to the control panel and the discharge pump after verifying the previous points, inspect the discharge pump located under the bowl in this way:
- - · disconnect the main supply from the bowl
 - remove both floor locking screws from the bowl (the two screws located on the rear side of the bowl)
 - by using a screwdriver or a pipe wrench loosen the metal clamp and remove the rubber coupling sleeve between bowl and pump
 - check that the impeller may freely turn and no objects are trapped inside the pump
 - re-assemble the coupling sleeve, tighten the clamp and fix the bowl to the floor again

3 In case of repeated breakage of the fuse:

· follow the same instructions as Point 2

Technical specifications

12/24 Volt DC Voltage: Flush pump consumption (single): 9 A/ 4.5 A Solenoid consumption (centralized): 1 A / 0.5 A Discharge pump consumption:

Flush pump: 1.2 m (4') self-priming, capacity 8 – 12, MAX 18

lt./min (2-3, MAX 5 USGPM).

Discharge pump: centrifugal, capacity 200 lt./min (53 USGPM). Inlet pipe: rubber pipe minimum internal dia. 19 mm (¾")

Discharging head: 5 meters upright (16')


rubber pipe minimum internal dia. 25 mm (1") Discharge pipe:

> 07-03-010 07-03-011 07-03-012

07-03-013

07-03-045 07-03-046

RECOMMENDED 38 mm (11/2").

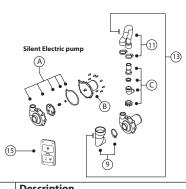

part #	Description
07-03-010	Silent Electric Compact 12V
07-99-035	Compact Seat
07-66-021	Silent Electric Conversion Kit 12V
07-99-054	Bowl Compact
07-03-011	Silent Electric Compact 24V
07-99-035	Compact Seat
07-66-022	Silent Electric Conversion Kit 24V
07-99-054	Bowl Compact
07-03-012	Silent Electric Comfort 12V
07-99-036	Comfort Seat
07-66-021	Silent Electric Conversion Kit 12V
07-99-056	Bowl Comfort
07-02-013	Silent Electric Evo Comfort 24V
07-99-036	Comfort Seat
07-66-022	Silent Electric Conversion Kit 24V
07-99-056	Bowl Comfort
07-03-045	Design Toilet Standard Silent 12V
07-99-035	Compact Seat
07-93-076	Design Silent Electric Conversion Kit 12V
07-99-67	Bowl Design Toilet
07-03-046	Design Toilet Standard Silent 24V
07-99-035	Compact Seat
07-93-077	Design Silent Electric Conversion Kit 24V
07-99-67	Bowl Design Toilet
07-04-014	Toilet Silent Premium 12V
07-99-037	Premium Seat SC
07-94-078	Bowl Premium Toilet
07-94-079	Comlete Pump Kit Premium 12V
07-04-015	Toilet Silent Premium 24V
07-99-037	Premium Seat SC
07-94-078	Bowl Premium Toilet
07-94-080	Comlete Pump Kit Premium 24V
07-04-016	Toilet Silent Premium Low 12V
07-99-037	Premium Seat SC
07-94-081	Bowl Premium Low Toilet
07-94-079	Comlete Pump Kit Premium 12V
07-04-017	Toilet Silent Premium Low 24V
07-99-037	Premium Seat SC
07-94-081	Bowl Premium Low Toilet
07-94-080	Comlete Pump Kit Premium 24V

Warranty

Two year limited warranty.

Silent Electric

Compact 12V • 17 A
Compact 24V • 8 A
Comfort 12V • 17 A
Comfort 24V • 8 A
Design Silent Electric Design 12V • 19 A Design 24V • 10 A
Premium

Premium	
Electric Silent 12V • 30 A	07-04-014
Electric Silent 24V • 16 A	07-04-015
Electric Silent Low 12V • 30 A	07-04-016
Electric Silent Low 24V • 16 A	07-04-017







At the product's end of life, please dispose of the product according to applicable law. Where applicable, please disassemble the product and recycle the parts according to material.

